



熱感觸控電子鎖

YDR353 中文說明書



**ASSA ABLOY**

ISL-1612-00

An ASSA ABLOY Group brand

使用前請詳讀此說明書。  
本產品為提升產品性能及品質而更改其功能  
及設計恕不另行通知。



## 前言

---

感謝您選擇Yale電子鎖。

新的Yale電子鎖使用最新科技讓您的生活更方便。

這是使用者說明書使您能夠安全地使用本產品。

請使用Yale電子鎖前完整地詳讀。

## 展開您的新生活!

The world's favorite lock



## 目錄

---


注意事項	04
產品特色	05
產品構成	06
產品規格	07
產品名稱	08
簡易說明	09
內部上鎖	12
門鎖鎖定	13
變更管理者密碼	14
登記和刪除使用者密碼	15
登記和刪除卡片	16
登記和刪除一次性密碼	17
刪除所有認證	18
登記和刪除原廠遙控器	19
登記和刪除發射器	20
強制上鎖	21
破壞/入侵警報/3分鐘鎖死功能	22
緊急電源	23
緊急電源供給接口	
電源供給	

## 注意事項


### 請務必詳讀

請閱讀以下注意事項


請勿裝置於戶外

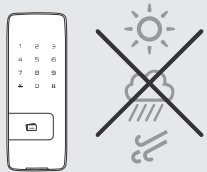


請勿任意拆卸、重組

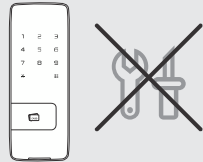

請勿以清水直接沖洗  
產品或以化學產品擦拭

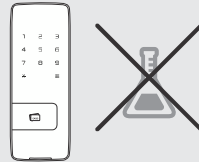

請勿以工具敲擊產品

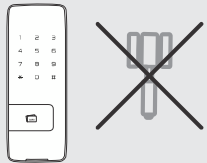

當您外出時，請務必  
確認門是否已上鎖



請牢記您的密碼



 **Caution** 請確實根據以上手冊操作以避免任何損害或破壞到產品。

## 產品特色

### 登入方式

YDR353提供兩種便利的憑證方式開啟，PIN 密碼或卡片。

\*使用晶片型Mifare卡(如悠遊信用卡)，需先喚醒面板。

### 隱形面板

當你觸碰面板時，會看見數字顯現。

### 卡片失效

若遺失卡片，請用卡片序號刪除。(中保無限+客戶可登入網頁查詢)

### 自動上鎖功能

關上門後電子鎖將會自動上鎖(也可使用手動上鎖)。

### 高溫警報

當內部感應火災高溫時會發生警報，方便您逃生。

### 低電量及緊急電源

當電子鎖低電量時，會閃爍著紅色警示燈。

電池若已無電狀態，可使用緊急外接電源，在面板的下方可以發現，使用9V電池暫時供電，輸入您的密碼即可開啟電子鎖。

### 遙控器(可另外選購)

遙控器也可以不使用；透過無線的技術離電子鎖50m的距離開啟。

## 產品構成

### 基本內容

本產品為提高產品性能，會隨時改變其產品的品質及內容，恕不另通知。


### >> 基本構成品



室外部(前面板)



室內部(後半部)

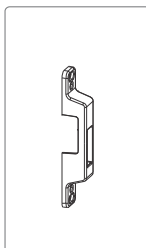

鎖扣片

- RFID卡片(4張)
- 使用者導覽手冊
- 安裝施工圖
- 門扇 (15, 35mm)
- 4顆AA電池
- 螺絲

### >> 選購品

- 遙控器
- 遙控器網絡盒

## 產品規格

### 規格

零件	規格	備註
室外部(前半部)	68(W) X 12(D) X 179(H)mm / Zinc die-casting	Operating temperature: -15~-55°C (5 ~ 131 °F)
室內部(後半部)	85(W) X 36(D) X 185(H)mm / Fiber-glass plastic	
電池	4EA 1.5V AA alkaline batteries (Operating voltage: 4.5~6V)	電池約可使用9~10個月 (以一天10次開關計算)
選擇 遙控器	無線	選配

\* 電池使用壽命依溫溼度、使用頻率及產品品質有所差異。

\* 當您訂購時，請檢查所有零件及配件。選配產品依國家或是經銷商的不同會有所改變。

\* 陽光長時間直接照射本產品，外觀顏色可能會改變。



Packaging of this product can be recycled.  
本產品的外包裝是可以被回收。




注意事項:  
確認您當地的廢棄物丟棄規  
範，請務必回收電子產品所產  
生的廢棄物。

〈廢電池請回收〉




## 產品名稱

### 前面 安裝在門外的前部

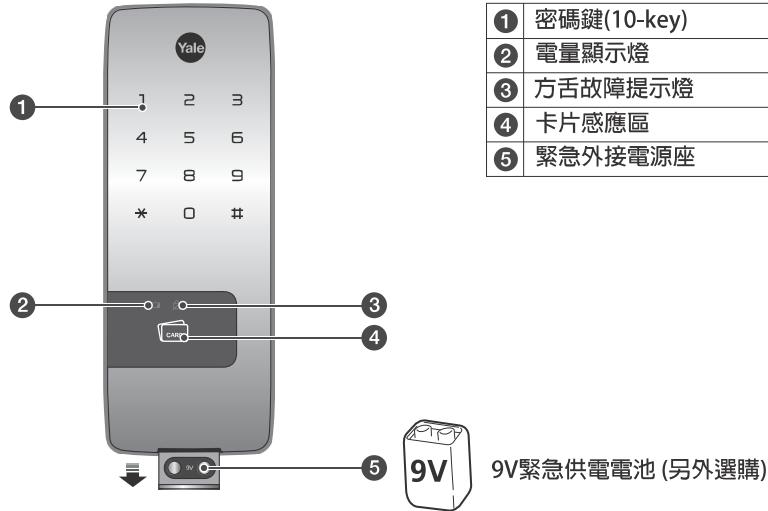

### 後面 安裝在門內的後部

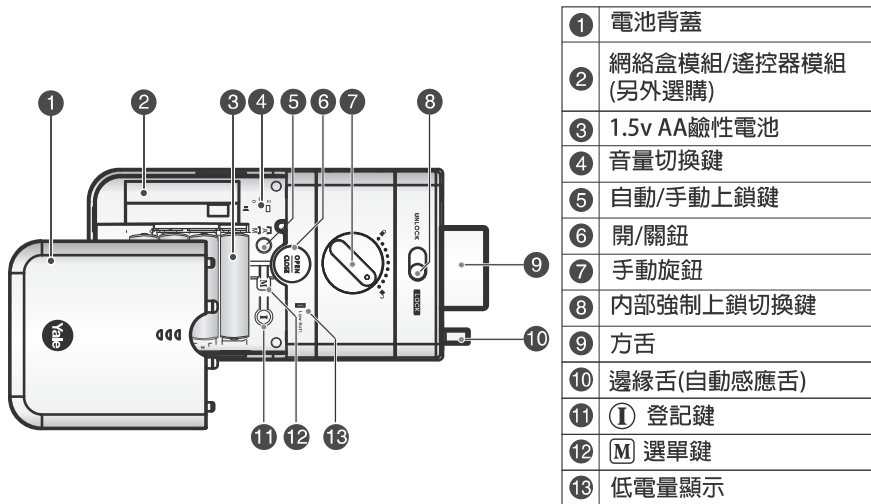

## 簡易說明

### 簡易圖示說明

	手掌觸碰面板的動作可以喚醒或將電子鎖上鎖	M PIN	輸入管理者密碼(4-12位)
	按此標示的數字	U PIN	輸入使用者密碼(4-12位)
	面板上按下 [*]	O PIN	輸入一次性密碼(只有4位數)
	面板上按下 [#]	U CARD	使用者卡片(最多可設定40張)
	在電池背蓋背內按下(登記)鍵	U N	用戶編號
	依標示的使用方法重覆操作		



### 建立新的管理者密碼

安裝前請務必建立管理者密碼。  
需成功完成此步驟即可使用電子鎖的程式。



# 快速設定

\*第一次使用前，請先建立管理者密碼：**M** PIN **I** 新管理者密碼 **#** **M** PIN 再輸入一次 **#** 管理者密碼

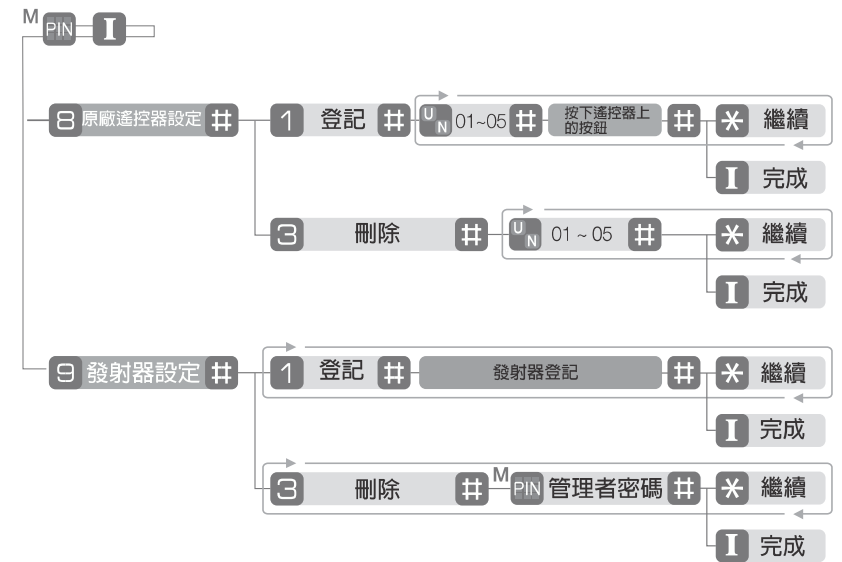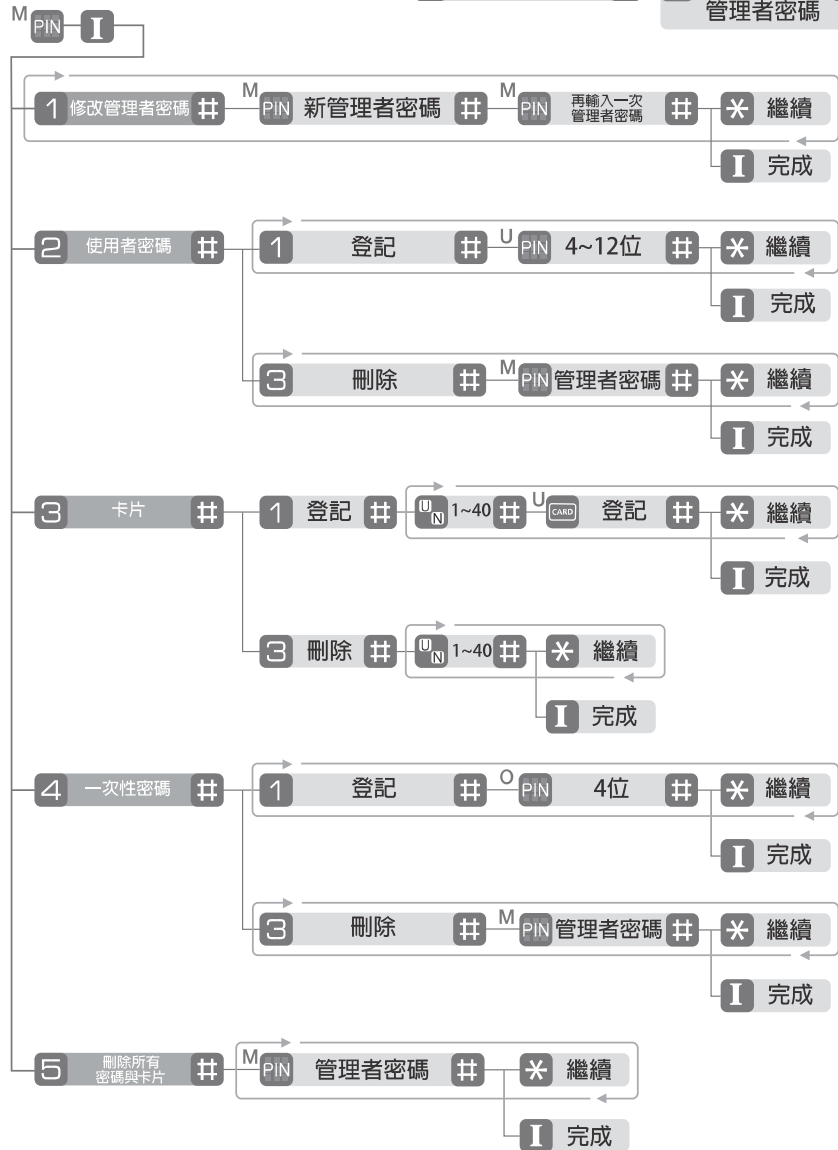

\*\*插入module才可設定: **8**、**9**

\*\*\*插入ZigBee module無設定功能: **8**


## 如何使用

### 從內部開鎖

>> 按下開/關鈕


#### 開啟

按下開/關鈕即可打開門。

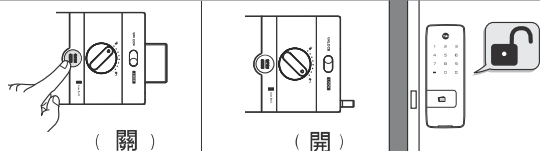


#### 關閉

按下開/關鈕即可打開門。

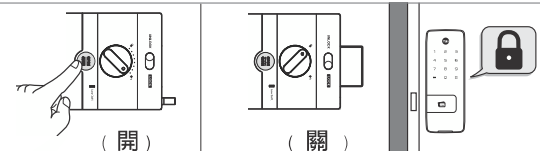

>> 在緊急情況下，可使用手動旋鈕

要解除鎖定，轉動旋轉鈕從"Close"轉至"Open"即可。

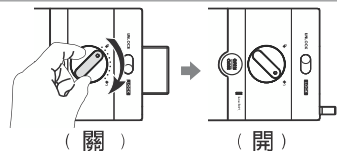


## 如何使用

### 上鎖設定

>> 從外部上鎖


#### 自動上鎖狀態

內置的自動上鎖感應器在門關起後5秒內會自動上鎖。

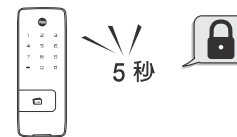

#### 手動上鎖狀態


輕輕觸碰前半部的面板即可上鎖。

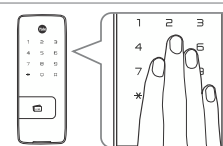

>> 從內部上鎖


#### 自動上鎖狀態

內置的自動上鎖感應器在門關起後5秒內會自動上鎖。

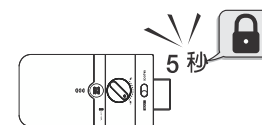


#### 手動上鎖狀態

將手動旋鈕轉到"Close"的標示即可上鎖。

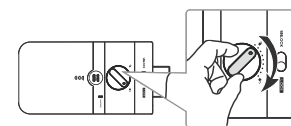


按下開/關鈕。

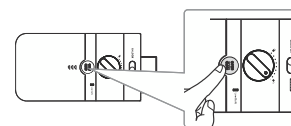

Note • 即便門鎖已設定為自動上鎖，請門鎖關上時再次確定上鎖後再離開。

# 如何使用

## 變更管理者密碼

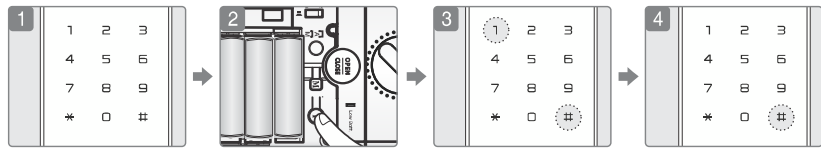


輸入管理者密碼

按下 **I** 鈕

按下 [1], [#]  
可以改變管理者  
密碼

輸入新的管理  
者密碼和 [#] 鈕

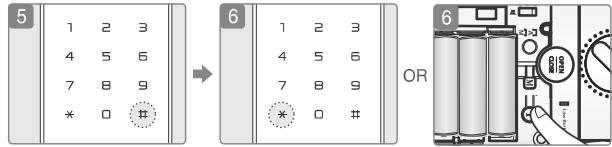

再輸入一次管理  
者密碼和 [#] 鈕


按下 [\*] 則繼續

OR

按下 **I** 鈕 (登記建)  
則完成

# 如何使用

## 登記使用者密碼

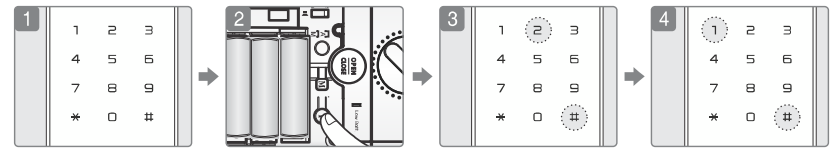


輸入管理者密碼

按下 **I** 鈕

輸入 [2], [#]

輸入 [1], [#]  
登記使用者密碼

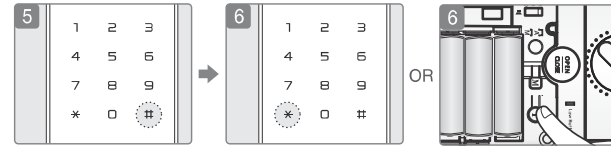

輸入使用者密碼  
(4~12位)和 [#]

按下 [\*] 則繼續

OR

按下 **I** 鈕 (登記建)  
則完成。




## 刪除使用者密碼






## 如何使用

### 登記卡片

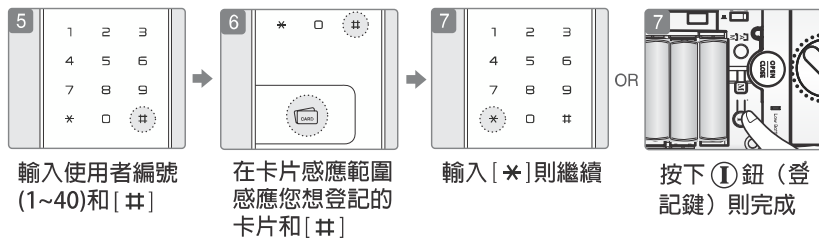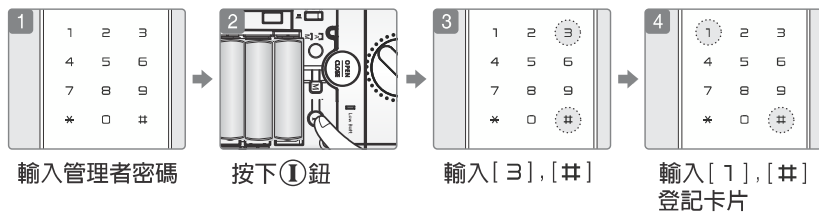
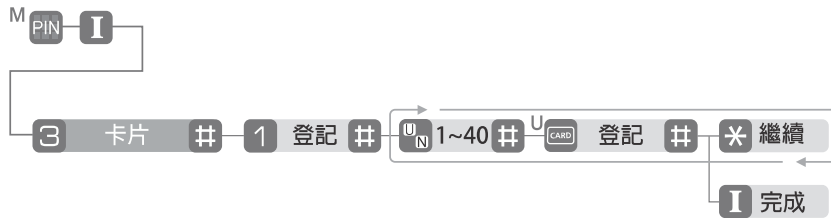


### 刪除卡片

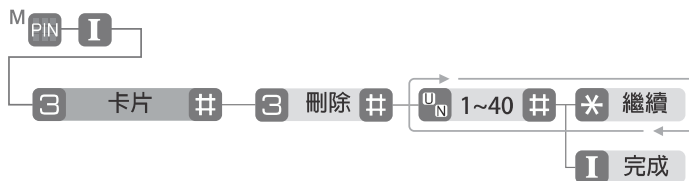

## 如何使用

### 登記一次性密碼


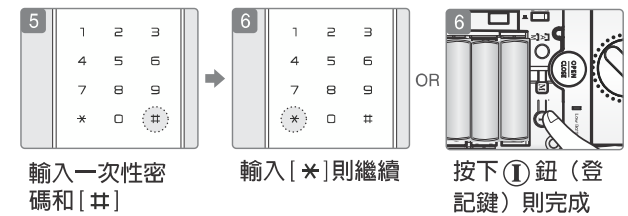
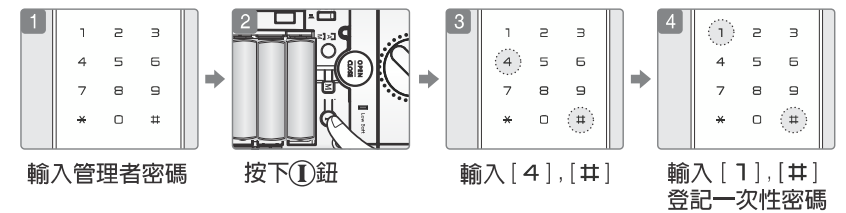


### 刪除一次性密碼






# 如何使用

## 刪除所有憑證

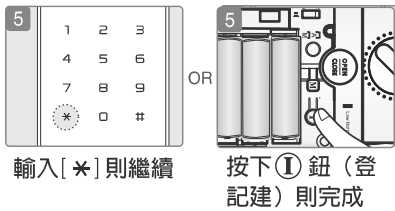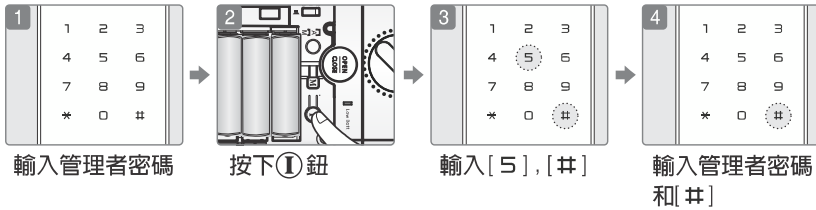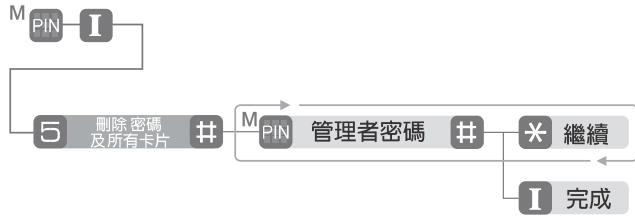


# 如何使用

## 原廠遙控器設定

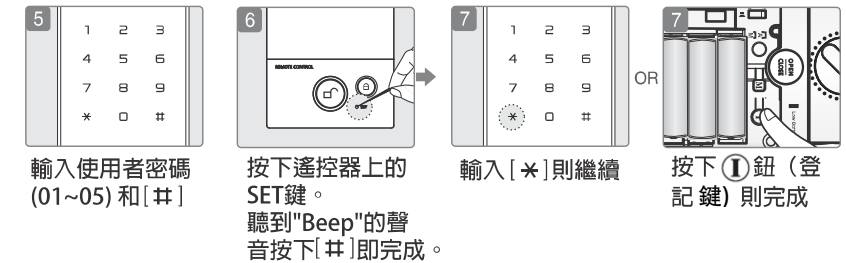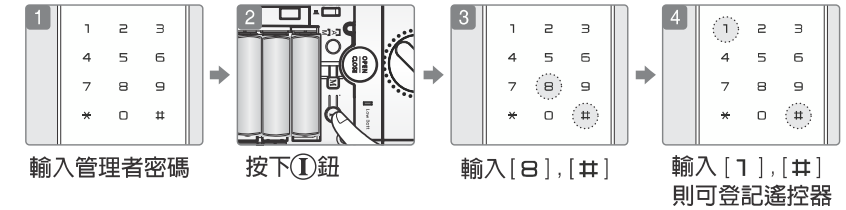
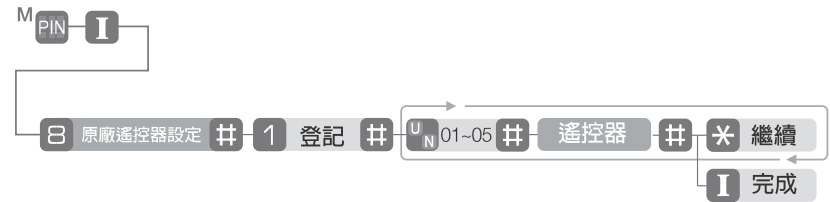


## 刪除遙控器設定

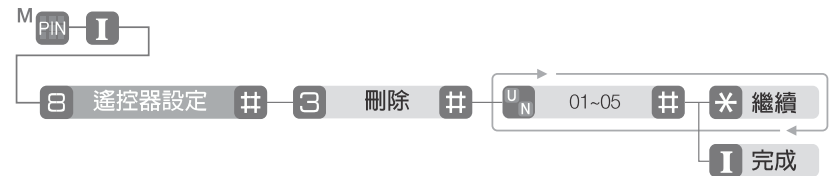

## 如何使用

### 發射器設定

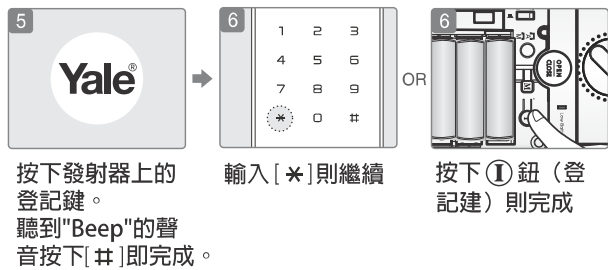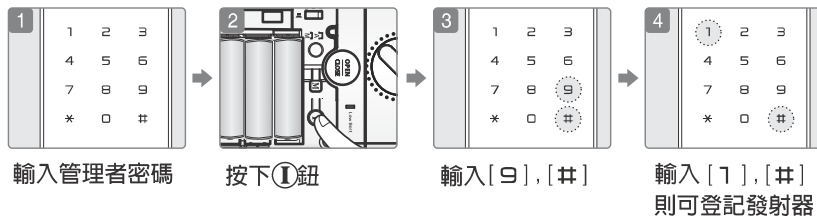

### 刪除發射器設定



## 如何使用

### 強制上鎖


#### >> 外部強制上鎖設定

##### 卡片

將設定好的卡片放在卡片感應區,感應5秒直到聽見3聲"beep"。

##### 密碼

- 1) 觸碰面板。
- 2) 輸入使用者密碼。
- 3) 輸入[#]三秒。

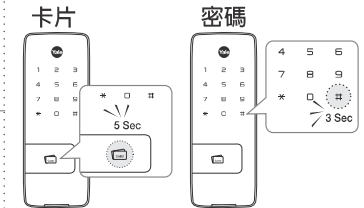


#### >> 內部強制上鎖設定

##### 設定

在門關閉狀態下, 切換 " 內部強制上鎖鍵 " 至 " LOCK " 位置。

##### 解除

將 " 內部強制上鎖鍵 " 切換至 " UNLOCK " 位置。

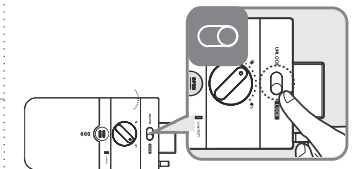

## 如何使用

### 3分鐘自動鎖死功能

在[3分鐘自動鎖死]狀態下,室外的面板無法執行工作。

如果不正確的密碼或未登記的卡片,連續五次錯誤操作,本產品會自動停止即鎖定3分鐘。

### 解除3分鐘自動鎖死

方法 ❶ 開下 ❶ 鍵。

方法 ❷ 按下開/關鍵。



### 入侵/破壞警報

入侵/破壞警報:  
當門上鎖時,有人試圖入侵破壞門鎖時,警報則會響起。

### 解除警報

方法 ❶ 輸入登記的使用者密碼。

方法 ❷ 按住 ❶ 鍵5秒。

方法 ❸ 感應已登記過的卡片。



- 從外部設定強制上鎖時,若從內部用手動方式開啟門,則警報響起。
- 從內部設定強制上鎖時,則外部無法利用卡片及密碼進入。


## 緊急電源

### 電池耗盡情況下,從外部供應電源的方法

電池耗盡時,你仍可以使用9V電池操作電子鎖如下顯示:

### >> 緊急電池供給

1. 將9V接觸緊急供應接觸點
2. 手掌觸摸密碼鍵,在面板上輸入已登記的使用者密碼
3. 用手掌觸摸面板或按下[\*]鍵已確認開鎖並更換電池。

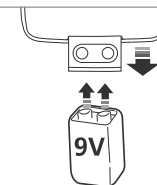

### 更換電池方法

#### 1. 電池使用壽命

本產品使用1.5V 鹼性 AA電池。每天用10次為標準,可使用9~10個月。

(建議使用者使用全新鹼性電池)


1:1 實際電池大小  
1.5V(LR6) 鹼性AA電池

#### 2. 電池低電量提示

以下狀況請您必須更換4顆全部電池:

- \* 面板上低電量紅色警示燈閃爍
- \* 當電子鎖出現低電量的訊息聲音

低電量提示燈(紅)

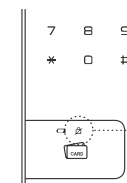

替換若使用不正確類型的電池,會有爆炸的危險。  
請依據國家電池再回收的規範,處理電池廢棄物。

廢棄電池請回收



- 電池壽命依溫度,濕度,使用頻率及電池品質會有所不同。
- 請勿使用充電電池。建議使用鹼性電池。

## 產品保固說明

產品出現異常時,請與安裝人員或購買商家聯繫。  
為維護您的權益,請您詳讀以下保固說明。(產品保固期為安裝日起24個月內)

消費者維修標準		維修內容	
		保固期內	過保固後
在正常使用狀態下	購買安裝後,產品出現故障時	免費維修	自費維修
	相同零件出現故障問題 2 次時	免費維修	自費維修
	相同零件出現故障問題 3 次以上時	更換產品	自費維修
非正常使用狀態下	未依使用說明書手冊規定操作造成損壞。	自費維修	自費維修
	擅自拆裝零件或修改,而導致不良情形。	自費維修	自費維修
	任意結合他牌產品或經加工接線而造成電子鎖產品故障時。	自費維修	自費維修
	消耗品的更換。(如:電池)	自費維修	自費維修
	使用者遺失密碼及鑰匙時的拆裝。	自費維修	自費維修
	非本公司合格師傅安裝,若經檢查為安裝問題則非保固。	自費維修	自費維修
	產品非台灣出貨及無序號視同水貨,則無法提供保固服務。	自費維修	自費維修
不可抗拒之天災地變,而造成的損壞。  (如火災、水災、煤氣事故等所出現的故障及損壞。)	自費維修	自費維修	

注意：本公司視保固書為保固依據，若有塗改及遺失，期維修將被認為保固無效。

## 備註

依據 低功率電波輻射性電機管理辦法

第十二條

經型式認證合格之低功率射頻電機，非經許可，公司、商號或使用者均不得擅自變更頻率、加大功率或變更原設計之特性及功能。

第十四條

低功率射頻電機之使用不得影響飛航安全及干擾合法通信；經發現有干擾現象時，應立即停用，並改善至無干擾時方得繼續使用。

前項合法通信，指依電信法規定作業之無線電通信。

低功率射頻電機須忍受合法通信或工業、科學及醫療用電波輻射性電機設備之干擾。




中興保全客服專線  
0800-22-11-95

針對本公司產品及維修團隊有任何相關疑問，歡迎撥打客服專線，將由專人為您服務。若需維修服務，請提供產品序號，以維護您的權益。



## Digital Door Lock

User Guide YDR353

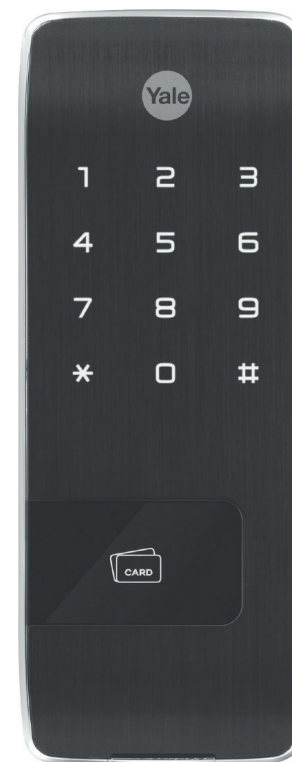

**ASSA ABLOY**

An ASSA ABLOY Group brand

PLEASE READ INSTRUCTIONS BEFORE USE.

The functions and design of this product can be changed without prior notice for performance and quality improvement.

## intro

---

Thank you for choosing a Yale Digital Door Lock.

The new Yale Digital Door Lock uses the latest technology to make life so much easier.

This user manual enables you to operate the product safely.

Be sure to read this completely before using the Yale Digital Door Lock.

## Unlock your life!

The world's favorite lock



## Contents

---


Safety Precautions .....	28
Product Features .....	29
Components Overview .....	30
Specifications .....	31
Identification .....	32
Quick Menu .....	33
Unlocking the door from the inside .....	34
Locking the door .....	35
Change the Master code .....	36
Register & Delete User code .....	37
Register & Delete Card key .....	38
Register & Delete Onetime code .....	39
Delete All Credentials .....	40
Register & Delete Remote controller .....	41
Register & Delete Controller .....	42
Forced Lock .....	43
3-minute Lock Out Feature / Break-in Alarm .....	44
Emergency Power .....	45
Emergency power supply for discharged batteries	
Power supply	

## Safety Precautions


### Must Read This

Please read this carefully.


Do not install the digital door lock in an outdoor environment.

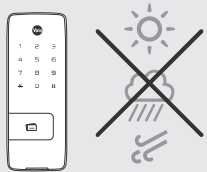


Do not attempt to disassemble the digital door lock by yourself. By doing so, you may get an electronic shock and damage the product.

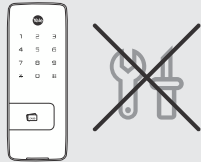


Do not use water and any type of solvent to clean the product such as gasoline or benzene as they can cause damage to electronic circuit, deterioration and or paint peel-off.

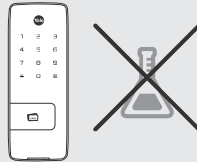

Do not use force with a tool onto the product.

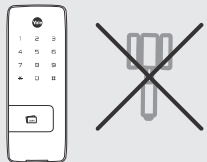

Please keep your code safely and Make sure to lock the door tightly when you go out.

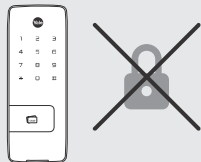

Immediate re-registration of all remaining keys is required to invalidate the lost key.



**Caution** • Make sure to follow the above instructions to avoid any injuries or damages on the properties.

## Product Features

### Various access

YDR353 has two credentials, PIN code or Card key for your convenience.

**\*Use Chip-Mifare Card, Must wake up the screen first.**

### Invisible keypad

Keypad can be seen only when you touch the keypad with your palm.

### Missing key invalidation

Once you lose your card key, it has no validation as long as you re-register rest of your keys.

### Operation status notification

The keypad informs you with current status, when you operate the digital door lock.

### Automatic locking

YDR353 automatically locks the door after door is closed. (Manual operation is also available.)

### High Temperature Alarm

When there is fire from the inside of your place, digital door lock releases the lock status and rings fire alarm automatically.

### Low battery and emergency power

When battery power is low, the battery warning indicator flashes RED. If battery power is completely lost, use the 9 volt battery override. To backup the power, apply 9V battery in either side of the terminals, which is located under the keypad.

Then Wake up the lock and enter your User PIN code to unlock the door.

### Remote Controller (Optional)

Remote controller is also available. Wireless Floating ID technology is adopted and works up to 50 m.



## Components Overview

### Basic Contents

The contents of this product may be subject to change without notice for performance or quality improvement.


#### >> Basic Contents



Front(Front Body)



Back(Main Body)

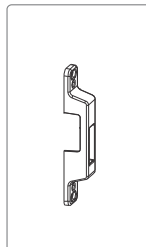

Strike

- Card Keys(4EA)
- User Guide
- Installation Template
- Holder Door (15, 35mm)
- 4 AA Batteries
- Screws
- Main Bracket

#### >> Option Accessory

- Remote Controller
- Remote Control Module

## Specifications

### Specifications

Parts	Specifications	Remarks
Front(Front Body)	68(W) X 12(D) X 179(H)mm / Zine die-casting	Operating temperature: -15~55°C (5 ~ 131 °F)
Back(Main Body)	85(W) X 36(D) X 185(H)mm / Fiber-glass plastic	
Battery	4EA 1.5V AA alkaline batteries (Operating voltage: 4.5~6V)	Last up to 1 year (10 times used a day)
Option Remote Controller	Wireless	Optional

- ※ Battery life may vary depending on temperature, moisture levels, frequency of use and the quality of the batteries.
- ※ Please make sure that all parts are included when purchasing the product.
- ※ Optional products may not be available depending on your country or local dealer.



Packaging of this product can be recycled.




#### WEEE Note:

Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check your local authority or retailer for recycling advice.



## Identification


**Front** Install the Front Body on the outside of Door.

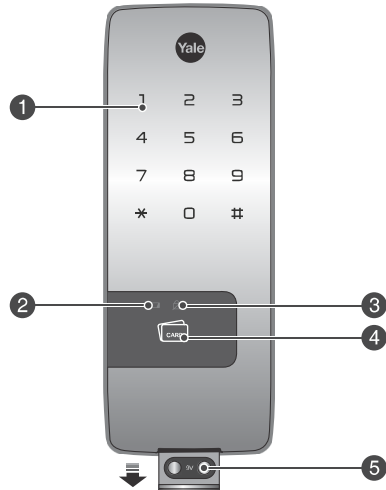

1	Keypad (10-Key)
2	Battery Change Lamp
3	Dead Bolt Jam Lamp
4	Card Key Reader
5	Emergency Power Supply Terminal



**Back** Install the Back Body on the inside of door.

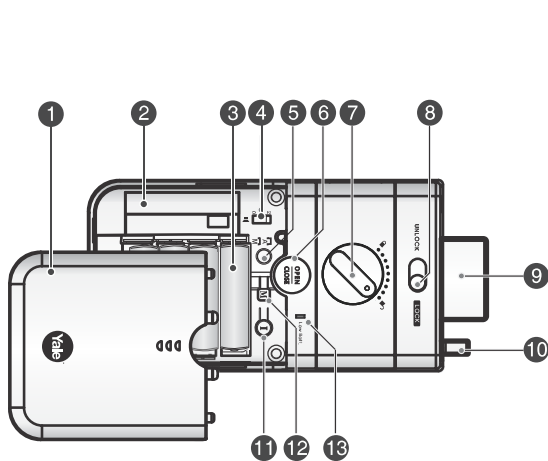

1	Battery Cover
2	Slot for Remote Control module (optional extra)
3	1.5V AA Alkaline Batteries
4	Volume Control Switch
5	Auto / Manual Lock button
6	Open / Close button
7	Manual thumb turn
8	Forced Lock Switch
9	Dead Bolt
10	Edge Bolt(Auto Lock Sensor)
11	I Registration button
12	M Menu Button
13	Low Battery Indicator


## Quick Menu

**Quick Menu Icon**

	Touch the keypad with your palm to begin and end actions.	<b>M</b> PIN	Enter Master Code (4~12digits).
	Click the indicated number.	<b>U</b> PIN	Enter User Code (4~12digits).
	Press [*]button on the keypad.	<b>O</b> PIN	Enter Onetime Code (Only 4digits).
	Press [#]button on the keypad.	<b>U</b> CARD	Enter User Card Key (Up to 40EA).
	Press(Registration)button from the inside of battery cover.	<b>U</b> N	User Slot Number should be 2 digits.
	Repeat operation using settings indicated.		

**Creating Master code**

Creating a Master code must be performed upon installation or after resetting the lock to factory default. Programming and use of lock is not possible until this step has been successfully completed.

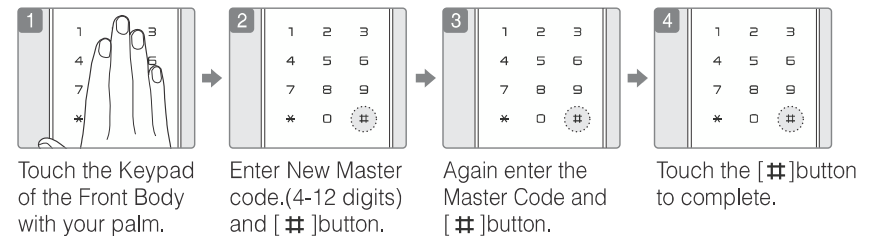

1 Touch the Keypad of the Front Body with your palm.

2 Enter New Master code.(4-12 digits) and [#]button.

3 Again enter the Master Code and [#]button.

4 Touch the [#]button to complete.


## How to Use

### Unlocking the Door from Inside

>> Press Open/Close button


#### Open

Press Open/Close button to unlock the door.

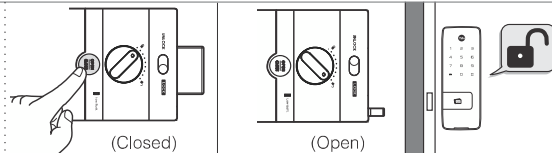


#### Closed

Press Open/Close button to lock the door.

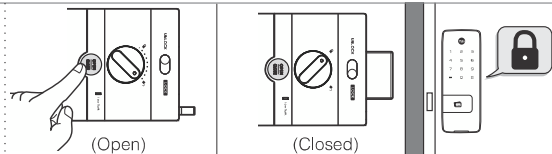

>> Using Manual thumb turn knob in Emergency

To release the lock, turn thumb turn knob from 'Close' direction to 'Open' direction.

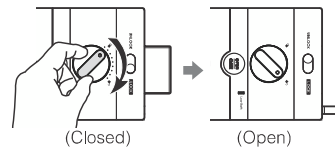


## How to Use

### Locking the Door

>> To Close Door from Outside


#### Auto Lock status

The built-in Auto Lock sensor automatically locks a door within 5 seconds after the door was closed.

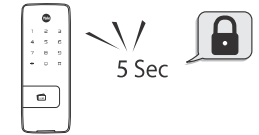

#### Manual Lock status


Touch the keypad in the front body gently with your palm to lock a door.

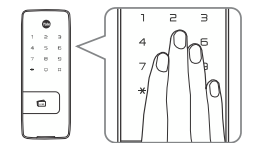

>> To Close Door from Inside


#### Auto Lock status

The built-in Auto Lock sensor automatically locks a door within 5 seconds after the door was closed.

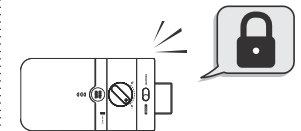


#### Manual Lock status

Turn manual thumb turn knob to close the lock, Into 'Close' marked direction.

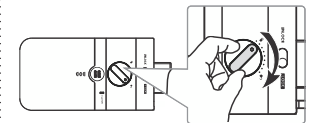




Press Open/Close button.

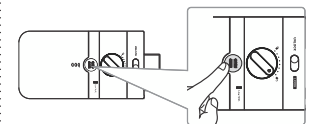

**Note** • Even after a door was locked by the Auto Lock function, please check again if the door was completely closed and locked.




# How to Use

## Change the Master code

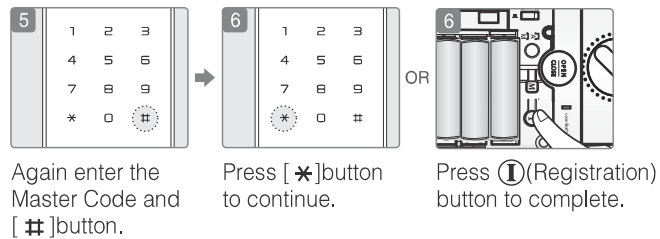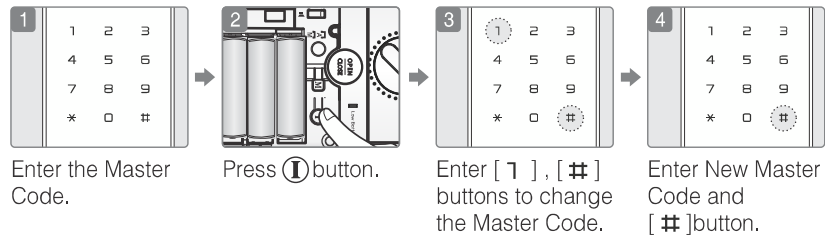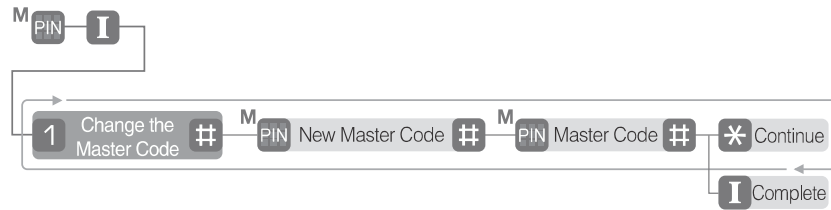


# How to Use

## Register User code

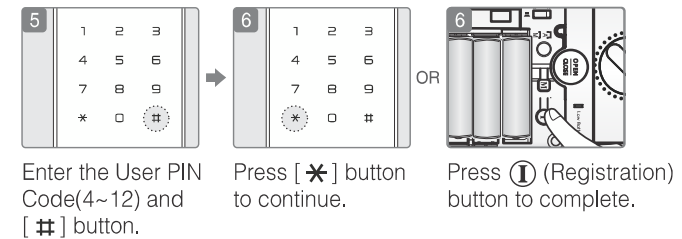
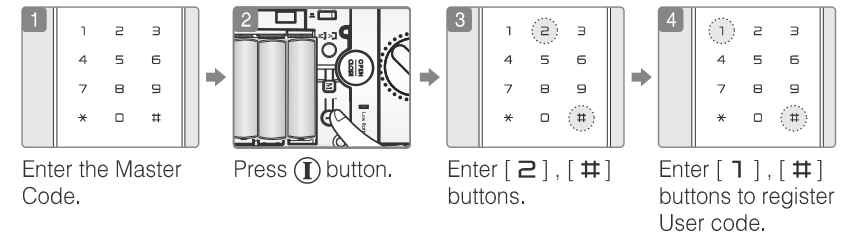
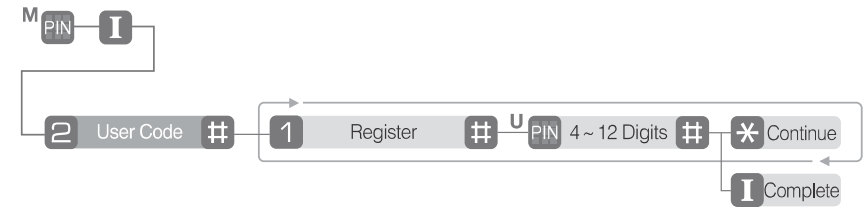


## Delete User code

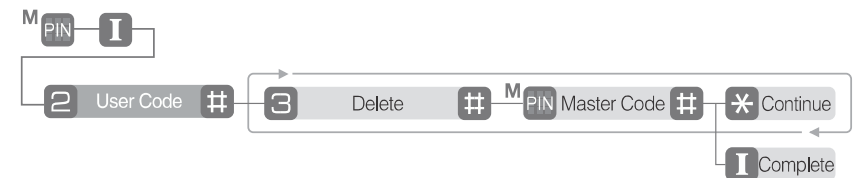


## How to Use

### Register Card key

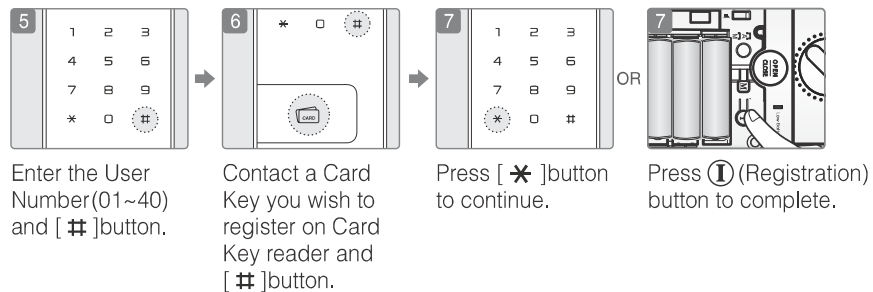
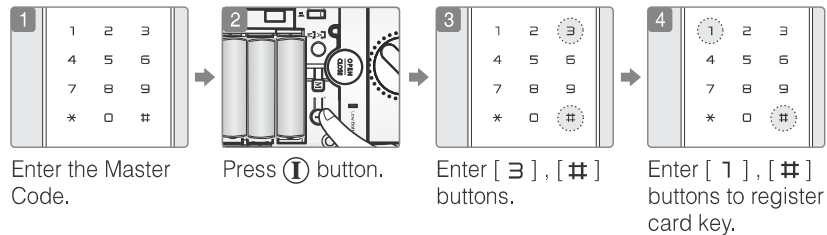
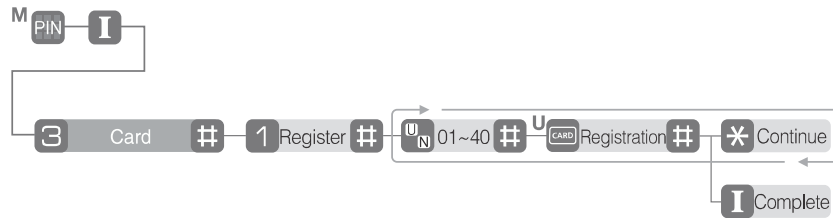


### Delete Card key

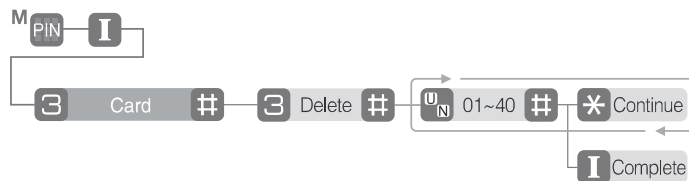


## How to Use

### Register Onetime code

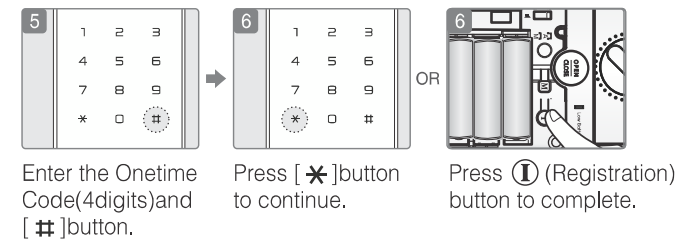
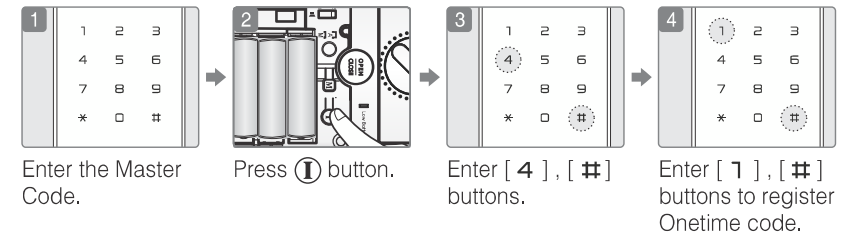
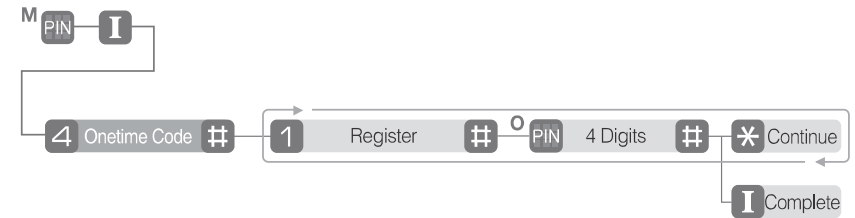


### Delete Onetime code

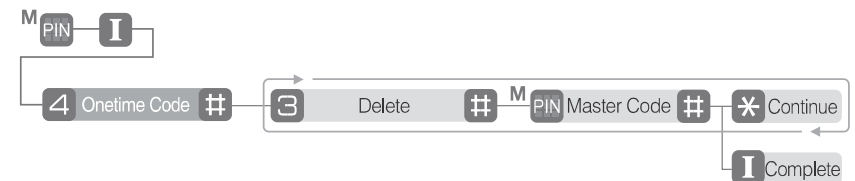




# How to Use

## Delete All Credentials except Remote Controller

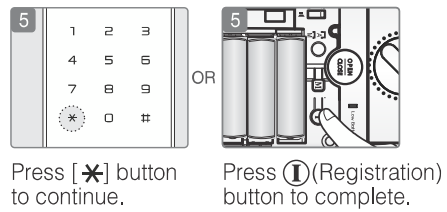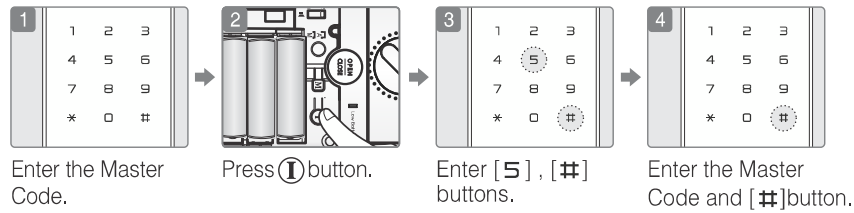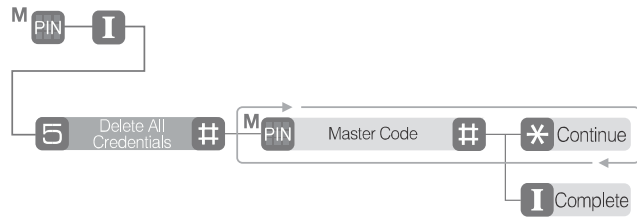


# How to Use

## Register Remote controller

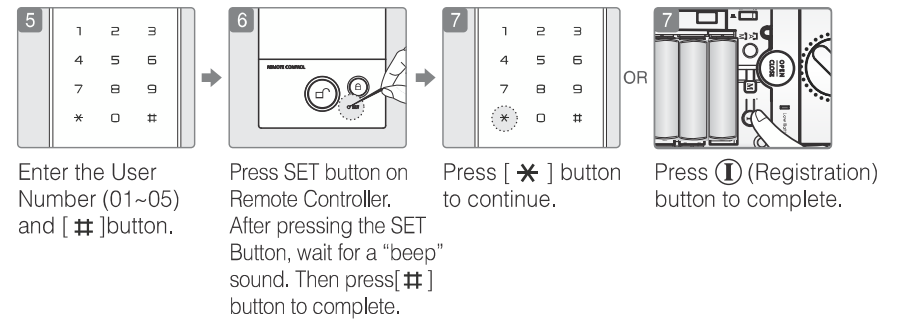
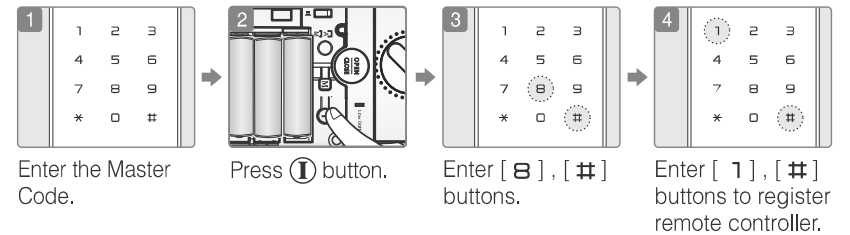
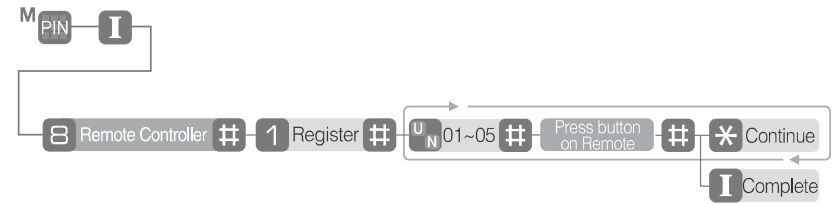


## Delete Remote controller

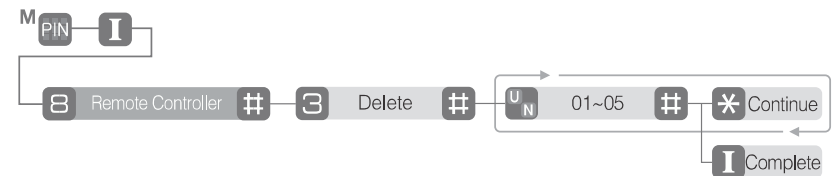


# How to Use

## Register Controller

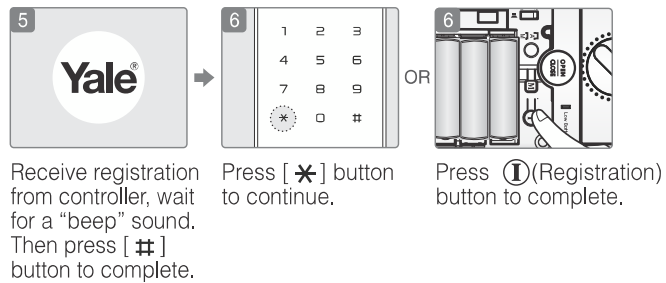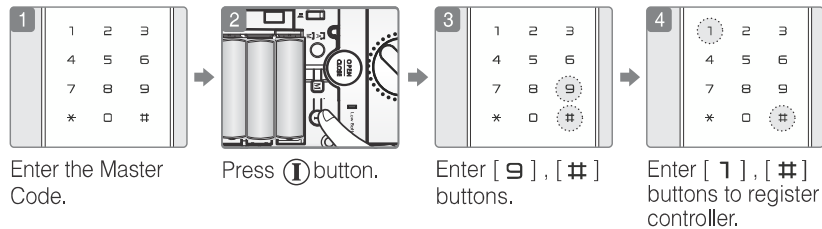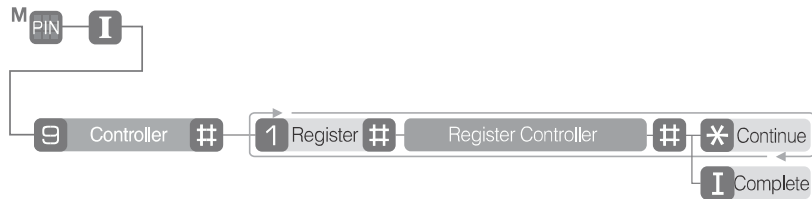

## Delete Controller

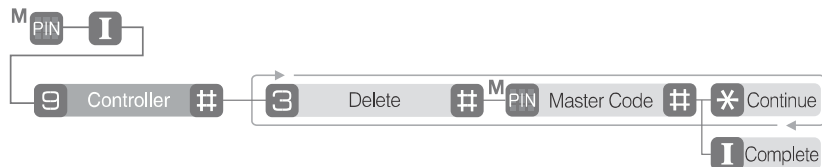

# How to Use

## Forced Lock


### >> Outside Forced Lock Setting

#### Card key

Contact a Card key on to 'Card key Reader' and stay still for 5 seconds until you hear 3 beep sound.

#### User Code


- 1) Touch with palm.
- 2) Enter User PIN code.
- 3) Enter [ # ] button for 3 seconds.

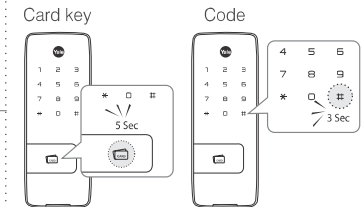

### >> Inside Forced Lock Setting

#### To set / Release Inside Forced Lock Switch

When the door is closed, move the Inside Forced Lock Switch to LOCK position so that a red sticker can be seen.

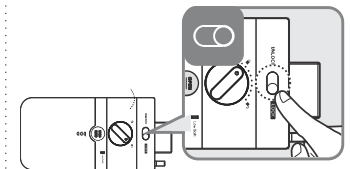

- Note**
- If you open a door with the manual thumb turn knob from inside when the Outside Forced Lock is set, the alarm goes off.
  - If the Inside Forced Lock is set, any attempt to open a door from outside whether it's be a Card key or a User code won't work.

## How to Use

### 3-minute Lock Out Feature

During the 3-minute Lock Out mode, buttons on the Keypad will not work.

If incorrect security codes or unregistered Card Keys are attempted 5 times in a row, it will lock out for 3 minutes with blinking LED.

### To Release 3-minute Lock Out

Method ① Press **1** button.

Method ② Press the Open/Close button.



### Break-in Alarm

Break-in Alarm : When someone tries to Break-in by damaging a door lock when it is locked, the alarm will sound.

### To turn off Alarm

Method ① Enter the registered User PIN Codes.

Method ② Press the **1** button for 5 seconds.

Method ③ Enter the registered Card key.




## Emergency Power

### Emergency power supply for discharged batteries

Even if the batteries are out of power, you can still operate the door lock by using 9V battery as show below.

### >> To supply Emergency power

1. Place the 9V battery onto the emergency power supply terminal.
2. Touch the keypad with your palm to activate and enter the registered User PIN Code on the keypad.
3. Touch the keypad with palm or Press **[\*]** button to confirm and replace the batteries.

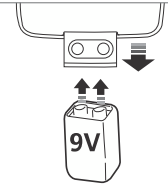

### Power supply

#### 1. Expiry period

The product uses four 1.5V alkaline AA batteries. They may sustain 1 year if used 10 times a day. (Users are advised to use authentic alkaline batteries.)

One-on-one real-life size  
1.5V(LR6) alkaline AA battery


#### 2. Low battery alarm

You must replace all 4 batteries in the following cases:

- \* The Low Battery LED on key pad flickers red.
- \* When low battery notification message is played.

RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE.  
DISPOSE OF USED BATTERIES ACCORDING TO THE NATIONAL CODE OR RECYCLING PROGRAM

#### Low battery lamp (red)

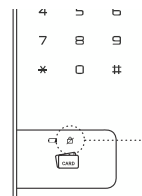

Note

- The battery life varies according to ambient temperature, humidity, the frequency of use, and the quality of the battery.
- Do not use rechargeable batteries. Only alkaline batteries are recommended.



